

Iplte Setup



1. Connect unit to the router with an ethernet cable (not supplied) using the jack marked WAN on the Iplte unit.
2. Connect the supplied WHITE cable to the jack marked ALARM on the Iplte unit.
3. Use ONLY this cable, using a different cable may damage the unit.
4. Connect supplied antenna to the antenna connector on the unit.
5. The unit can be located in the alarm panel, with the antenna located outside the enclosure.
6. Connect 12VDC to the unit as follows:
 7. RED to positive, BLACK to negative 12 volts DC only, from the panel.
 8. Connect YELLOW to the phone TIP terminal on the panel.
 9. Connect GREEN to the RING terminal on the panel.
10. When the unit is powered up and the LEDS are illuminated, wait 10 minutes.
11. Create the user account on the VirtuAlarm portal.
12. Select transmitter type: "VirtuAlarm® DUAL-TECH IP-LTE - Total Control®"
13. Send test signals.